


Gaber®

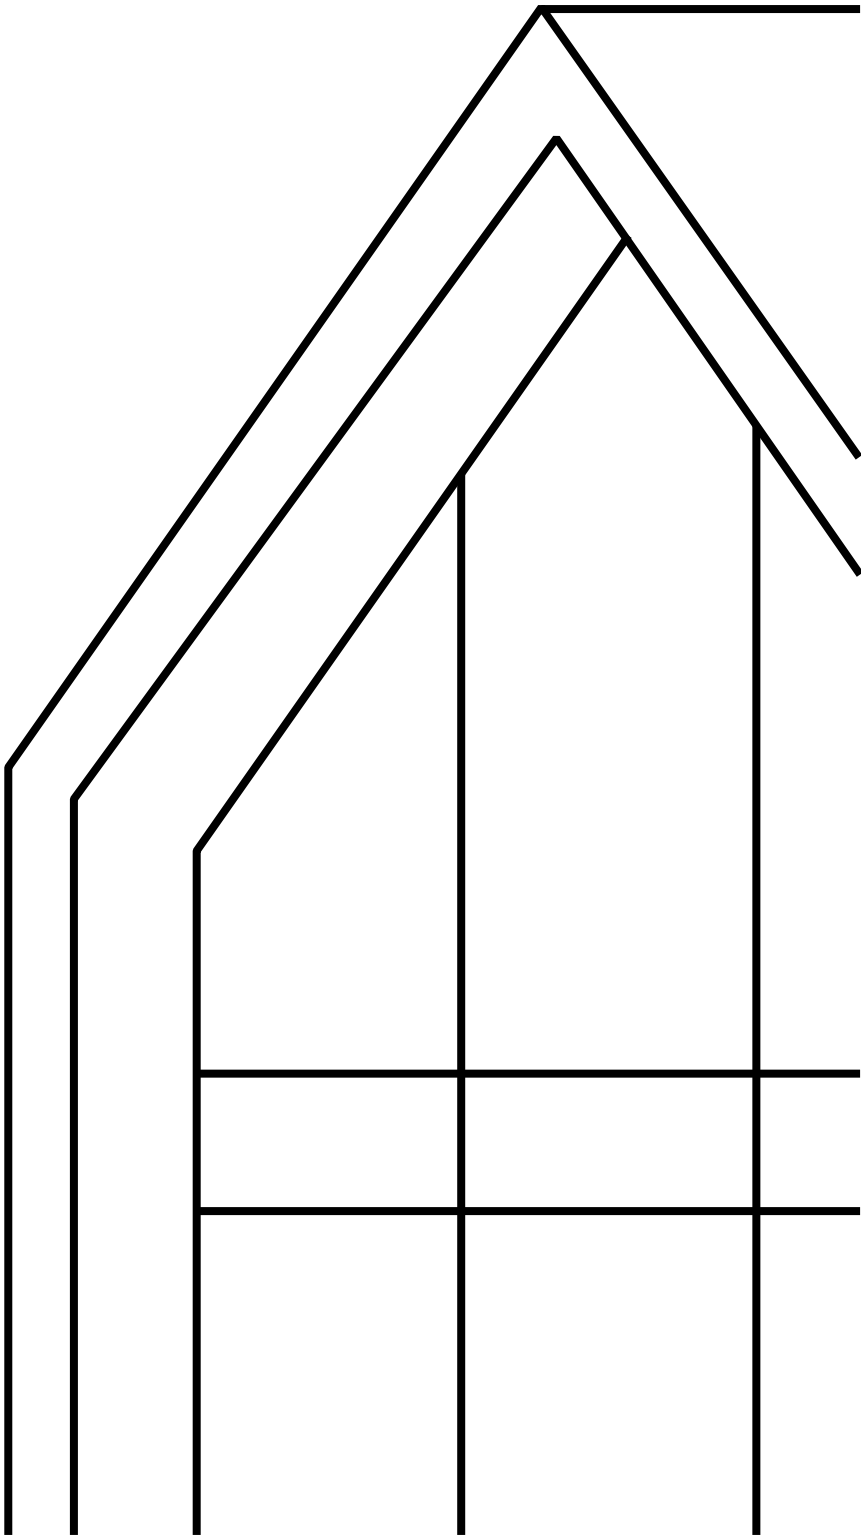

GENERAL CLEANING GUIDE

Gaber®

EASY TO CLEAN, EASY TO MAINTAIN



By following the recommendations in this guide, you will keep all products in good condition and help prevent premature damage.

Please note that this guide does not constitute a warranty; it provides instructions for proper product cleaning. Users are responsible for using suitable cleaning agents and tools that do not alter or damage the surfaces. Proper maintenance will help enhance performance and extend product lifespan over time.

Cleaning results may vary depending on the size of the stain, the cleaning product used, and the surface exposure time.



ESSENTIAL MAINTENANCE

1. It is recommended to clean the products at least once a week to prevent dirt and contaminants from becoming permanent.

2. Clean the entire surface using circular motions with water and liquid hand soap, or refer to the specific guide for recommended cleaning products.

Rinse with a clean, damp white cloth to remove any soap residue.

Repeat if necessary and allow to dry completely.

NEVER USE



Solvents such as thinners, acetone, bleach, waxes, silicones, or harsh detergents.



Alcohol and/or cleaning products with a non-neutral pH.




Abrasive tools such as plastic or metal scouring pads, or hard-bristle brushes, which may permanently damage the material.



Do not mark the product with pens or markers, as the ink may be absorbed and cause permanent stains.

For further information, please refer to the cleaning guides specific to each material.

Gaber®

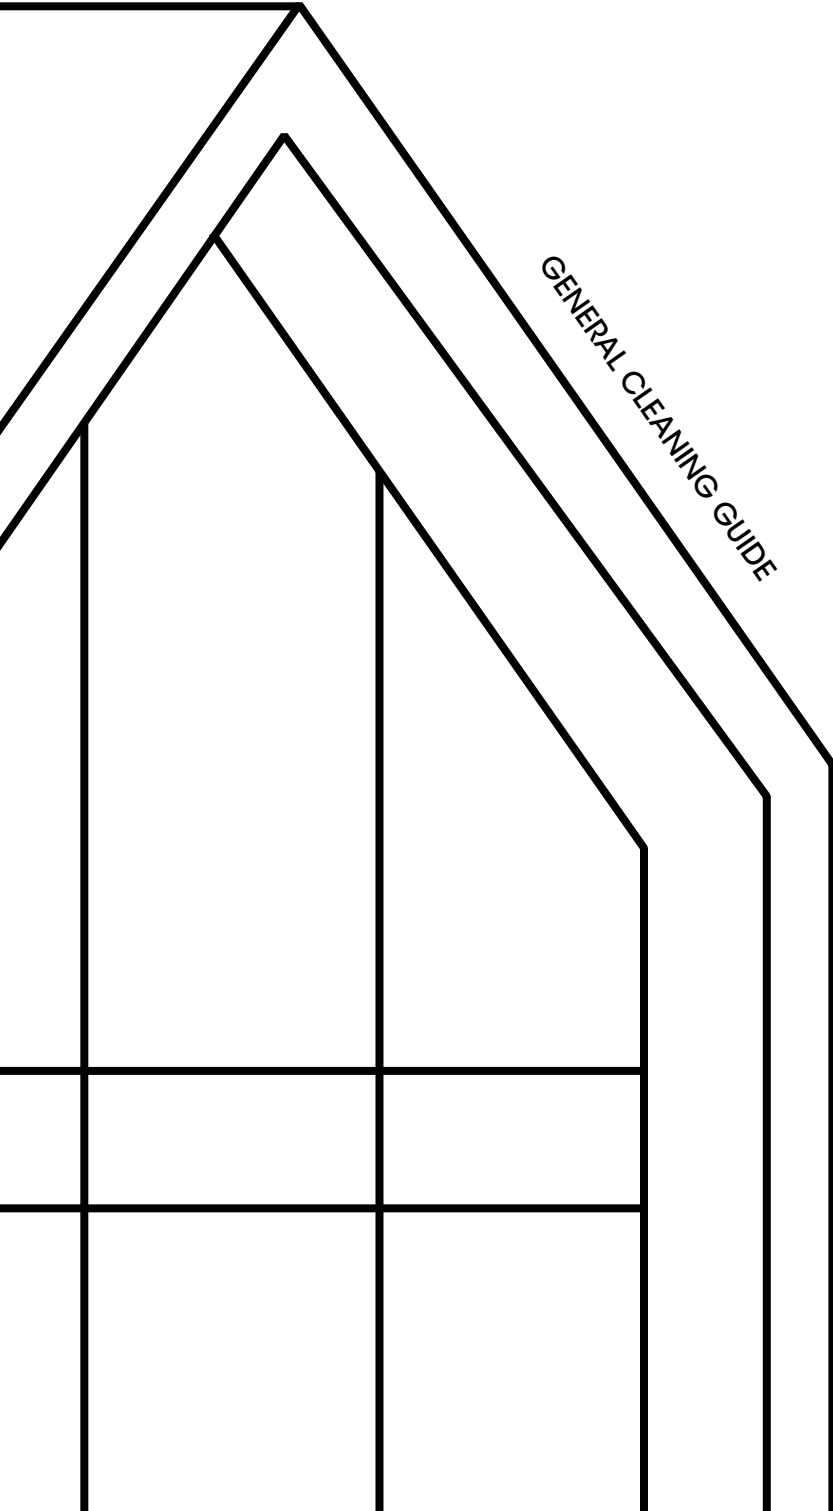

GENERAL CLEANING GUIDE

Gaber

Via Altivole 3, 31031 Caerano di San Marco, TV - ITALY

Tel. +39 0423 915521

info@gaber.it